


Status Indicator LEDs

Press the ON/OFF button to turn the printer on. Three LED indicators, located on the top of the printer, indicate various printer functions. The LED will indicate the function as described below:

LED	Status		Function
	Condition	Function	
LED #1 Communication	Green	Flashing	Power is ON and the printer is in RS232 or HID mode
		Steady	Communicating with host
	Blue	Flashing	Power is ON and the printer is in Bluetooth mode
LED #2 Battery	Amber	Steady	Transmitting/Receiving
		Flashing	Power is ON and the printer is in 802.11b/g mode
	Red	Steady	Transmitting/Receiving
LED #3 Magnetic Card Reader & Printer Error	Green	Steady	Low power indication
		Flashing	Battery being charged. The LED will turn off when the battery is fully charged
	Red	Steady	<ul style="list-style-type: none"> Indicates that MCR is ready to accept data Indicates that SCR is ready to accept data
		Steady	<ul style="list-style-type: none"> Printer Error - The printer is out-of-paper or Paper door is open. MCR/SCR faulty condition
		Flashing	Indicates the print head is hot and printing is paused

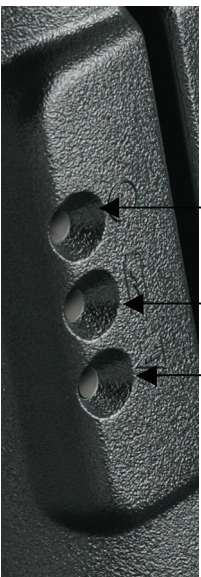

1. Turn off printer.
2. Press and Hold the Paper Feed Button.
3. While holding the Paper Feed Button, press the ON/OFF Button.

Performing Self-Test

Communication: All printers ship in RS232 and Bluetooth - mode. IPDA and 802.11g are optional features. Refer to the User Guide for set-up instructions.

Copyright © 2008 Exttech Instruments Corporation. All rights reserved including the right of reproduction in whole or in part in any form. Exttech Instruments Corporation, 285 Bear Hill Rd., Waltham, MA 02451-1064
 Phone: 1-781-690-7440 Fax: (781) 890-7864 WEB: www.exttech.com/printers

Rev. 112108-R1


Model APEX 2 Mobile Printer

EXTTECH
INSTRUMENTS
A FLIR COMPANY

Quick Start Guide

This guide provides a reference illustration of the initial steps to quickly get your APEX 2 printer up and running. Refer to the User's Guide for more detailed information on the operation and use of the Model APEX 2. A copy of the User's Guide can be downloaded from www.exttech.com/printers.

APEX 2 Overview

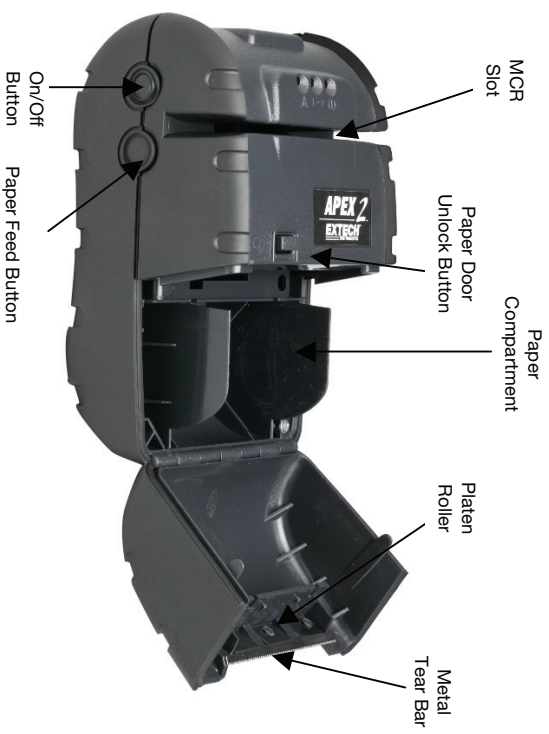

Installing the Battery

1. Unlock the battery door by sliding the battery door locking tab down.
2. Open the battery door to an angle of approximately 90 degrees. (Do not force open)



Note: Ensure that the battery side that has the 2 contact terminals is facing down to make contact with the spring probes inside the battery compartment.

3. Insert battery as shown (non-contact end first) letting the contact end drop into place.
4. Close the battery door and then lock the battery door by sliding the battery door locking tab up.

Charging the Battery

1. Plug the battery charger adaptor output cable into the battery charger connector.
2. Plug the battery charger adaptor into the appropriate AC line voltage socket.
3. The LED will illuminate, indicating that the battery is being charged.
4. The battery will be fast charged and, after 180 minutes, the LED will turn off.



Installing the Paper Roll

1. Press the paper door release button. The door will open slightly. Open the rest of the way, as shown.



2. Install Paper Roll



Note: Pull Paper Roll Leader Out of Printer. Note Direction of Paper Travel.

3. While pressing the Paper Door Release button, close the paper door.
4. Press the paper door down and release the Paper Door Release Button.
5. Turn on the printer by pressing the Power button. Test the paper advance function by pressing the Paper Feed button. Verify that the paper advances correctly.

Tearing Paper

The printer's paper door acts as a tear bar. To tear paper, pull one edge of the paper against the tear bar as shown. Tear down and across against the tear bar to tear the paper. Pull one edge of the paper against the tear bar.



Note: Pulling paper up and/or sideways without using the tear bar can cause a paper jam due to paper misalignment in printhead mechanism.